


Generator start up

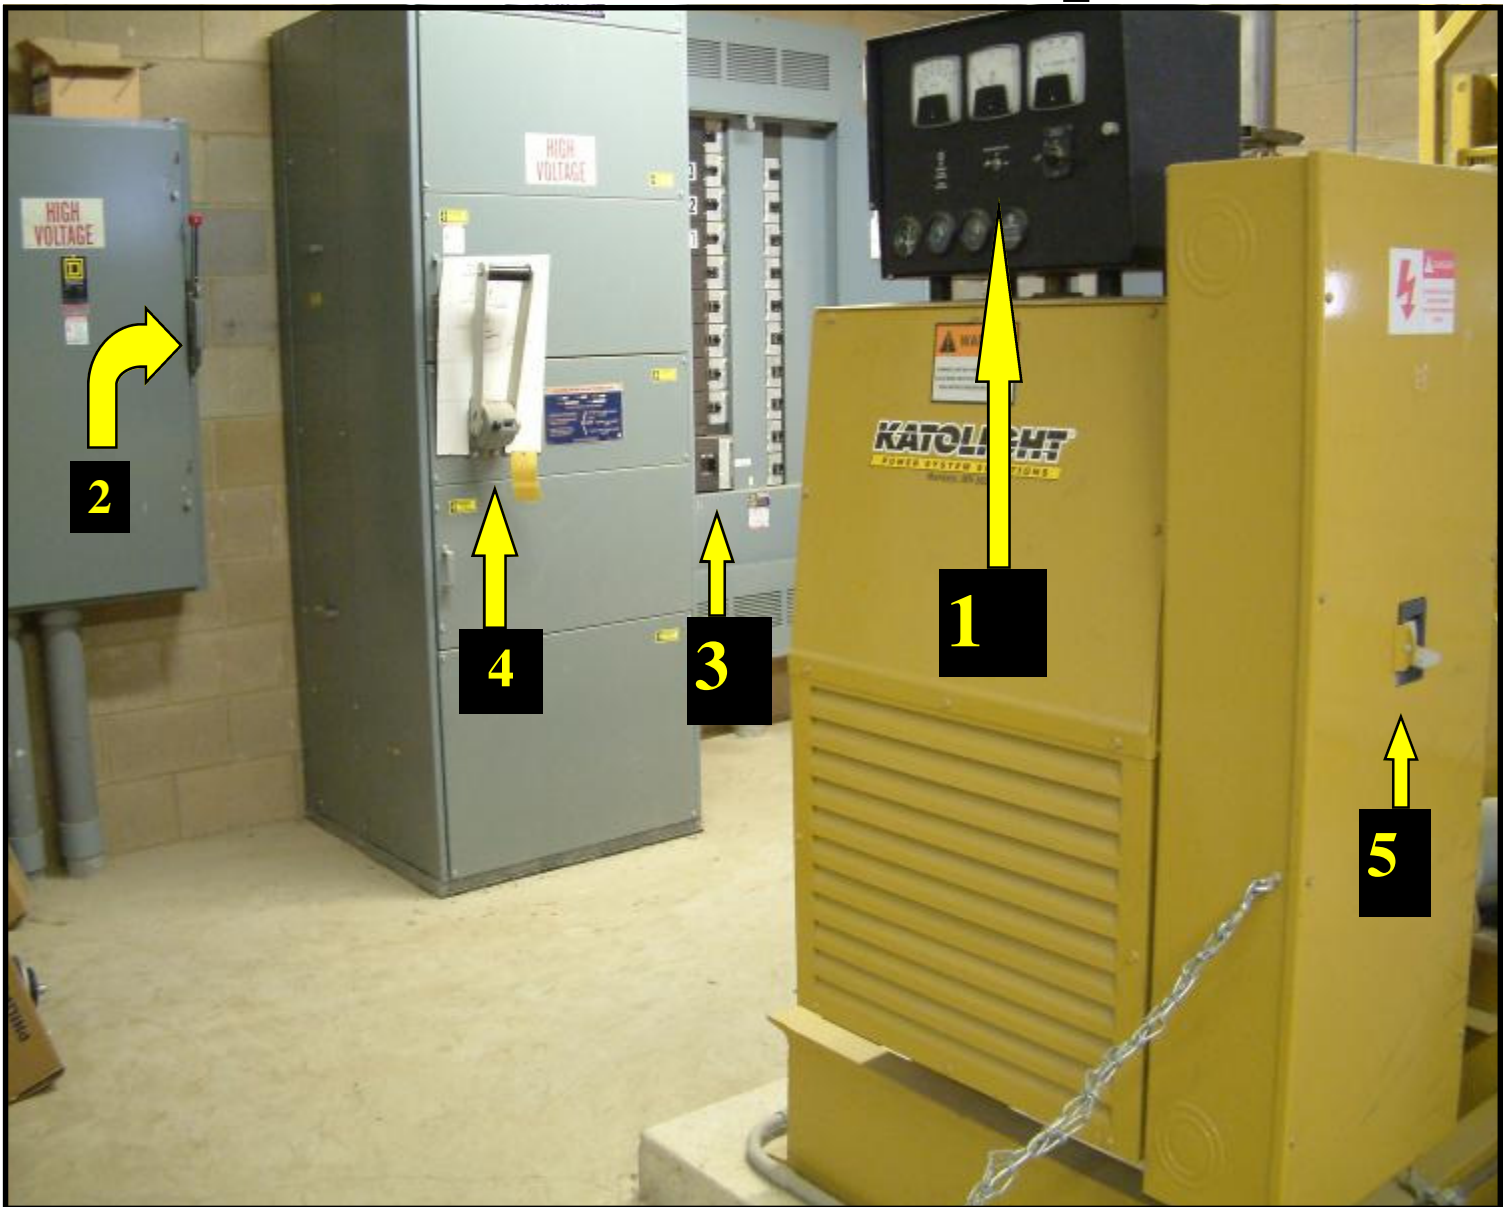

Start Generator

1. Move switch (1) to start generator
2. Move switch (2) down to disconnect power.
3. Disengage circuit breaker (3) by pushing main breaker off.
4. Disengage main power (4) by pulling lever down (Pull out black knob on front to release lever)
5. Push generator switch (5) up.
6. Push lever (2) back up.
7. Turn circuit breaker (3) back on.
8. Power should come on.
9. Reset air compressor.

Stop Generator

1. Turn lever (2) down and breaker (3) off.
2. Move generator switch (5) off to disengage generator.
3. Disengage main power (4) by pushing lever up (pull out black knob on front to release lever)
4. Turn lever (2) and (3) back on.
5. Leave generator run for 5 minutes to cool down.
6. Turn generator off (1)
7. Reset air compressor.

Compressor reset button

